


NCI Mictor Socket Layout

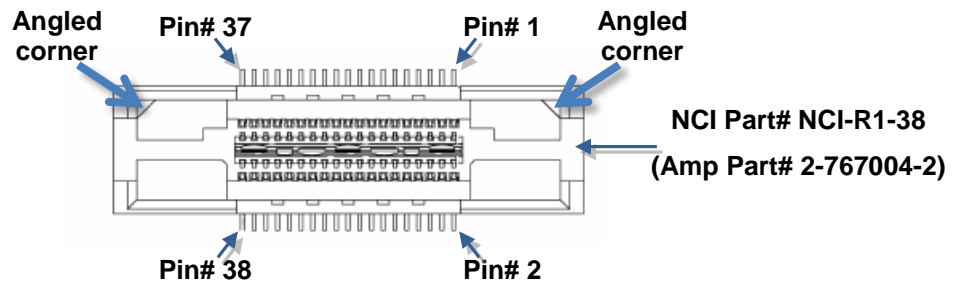

Pin	NCI Chan	Agilent Chan	Pin	NCI Chan	Agilent Chan
38	B00	D0 odd	37	A00	D0 even
36	B01	D1 odd	35	A01	D1 even
34	B02	D2 odd	33	A02	D2 even
32	B03	D3 odd	31	A03	D3 even
30	B04	D4 odd	29	A04	D4 even
28	B05	D5 odd	27	A05	D5 even
26	B06	D6 odd	25	A06	D6 even
24	B07	D7 odd	23	A07	D7 even
22	B08	D8 odd	21	A08	D8 even
20	B09	D9 odd	19	A09	D9 even
18	B10	D10 odd	17	A10	D10 even
16	B11	D11 odd	15	A11	D11 even
14	B12	D12 odd	13	A12	D12 even
12	B13	D13 odd	11	A13	D13 even
10	B14	D14 odd	9	A14	D14 even
8	B15	D15 odd	7	A15	D15 even
6	B16	HCLK	5	A16	LCLK
4	B17	GND/NC	3	GND	GND
2	no connect	no connect	1	A17	GND/NC

When the probe is connected to the NCI C/D pod input: Pod C = Pod A, Pod D = Pod B.